

# TRANSDUCER ASSEMBLY

## TRANSDUCER PR ASSEMBLY WITH O-RING P/N HA5473

Description	Part No.
XMTR, PR, 0-300	HA5253
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER PR ASSEMBLY WITH O-RING P/N HA5474

Description	Part No.
XMTR, PR, 0-3000	HA5254
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING P/N HA5475

Description	Part No.
XMTR, PR, 0-6000	HA5255
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY 0-1000 PSI P/N HA6349

Description	Part No.
XMTR, PR, 0-1000	HA6348
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING P/N HA7612

Description	Part No.
XMTR, PR, 0-10,000	HA7408
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING P/N HA6349

Description	Part No.
XMTR, PR, 0-5000	HA7969
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING P/N HA9577

Description	Part No.
XMTR, PR, 0-1500	HA9576
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING P/N HA9891

Description	Part No.
XMTR, PR, 0-2000	HA9890
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311

## TRANSDUCER ASSEMBLY WITH O-RING HB1065

Description	Part No.
XMTR, PR, 0-500	HB1064
Snubber, 1/4"	HA5310
O-Ring, Buna	HA5311